

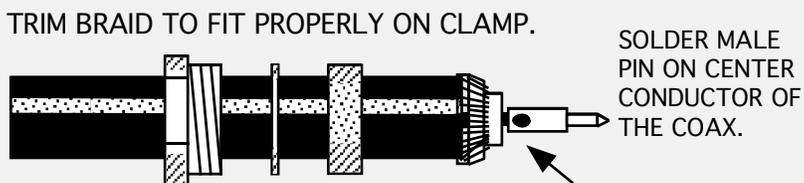
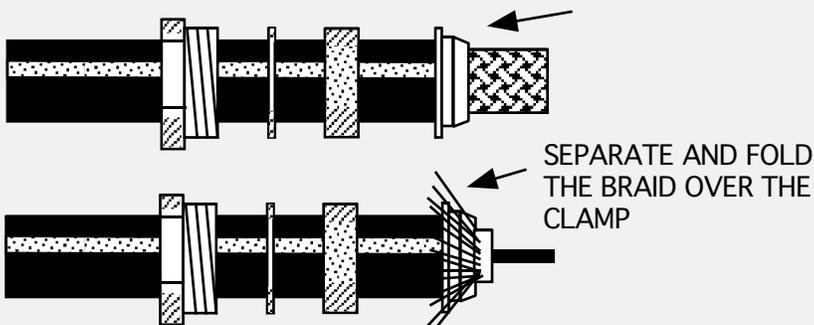


N Connectors

ASSEMBLY INSTRUCTIONS

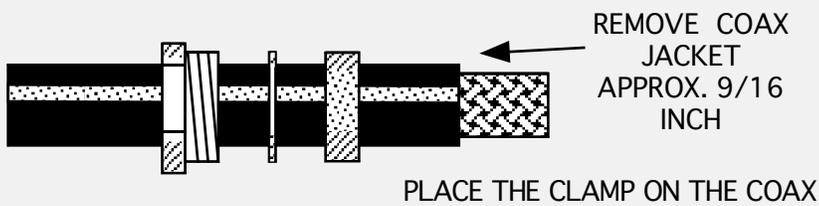

NOTE: USE A FINE FILE TO RUFF UP THE CENTER CONDUCTOR UNDER THE SOLDER HOLE TO IMPROVE THE SOLDER JOINT.

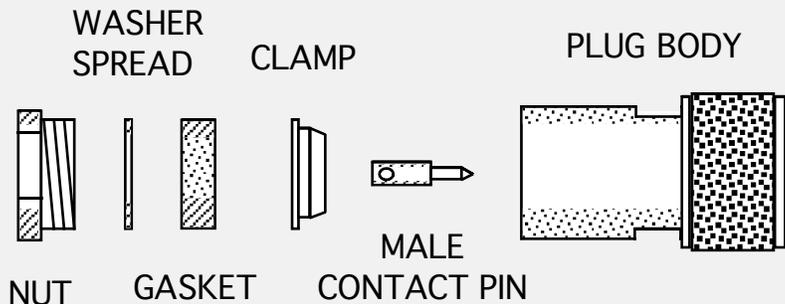